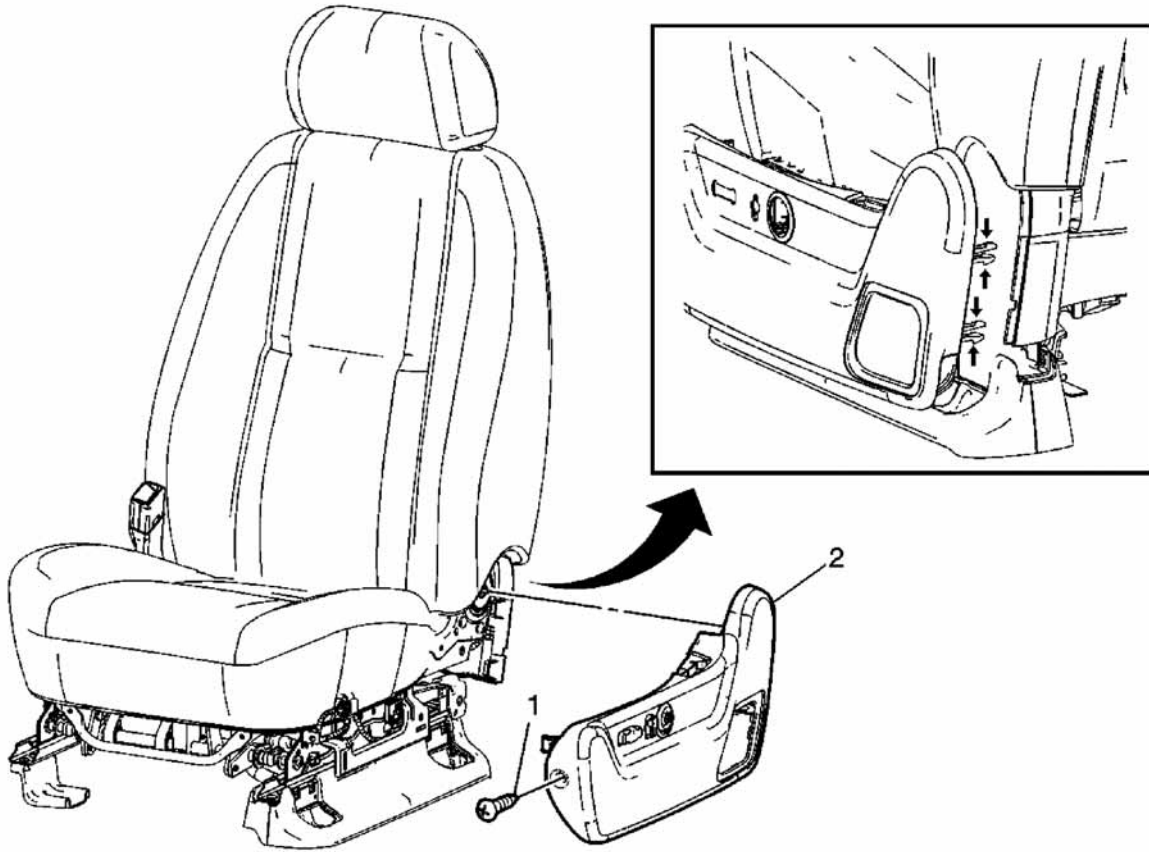


FRONT SEAT CUSHION OUTER TRIM PANEL REPLACEMENT (POWER) 

**Fig. 14: View Of Front Seat Adjuster Outer Finish Cover & Screw**  
 Courtesy of GENERAL MOTORS CORP.

### Front Seat Cushion Outer Trim Panel Replacement (Power)

Callout	Component Name
1	Front Seat Adjuster Outer Finish Cover Screw  <b>NOTE:</b> <b>Refer to <u>Fastener Notice</u> .</b>  <b>Tighten:</b> 2 N.m (18 lb in)
2	Front Seat Adjuster Outer Finish Cover  <b>Procedure</b> <ol style="list-style-type: none"> <li>1. Squeeze the tabs in the rear of the cover together to disengage the outer trim cover from the rear trim cover.</li> <li>2. Pull outward to release the retainers from the seat assembly.</li> <li>3. Disconnect the electrical connectors.</li> <li>4. If replacing the finish cover, remove the switches and install on new finish cover.</li> </ol>